

## RS-232 control interface for the PAM245

9600.n.8.1

<CR>: Enter Key

<Esc>: Escape Key

<Space>: Space Key

no letter case

2: Host respond prompt:

PA>

3: Help function:

Help function will show all command and host respond status.

Type: Help<CR> or ?<CR>

4: Show All PA Status:

Type: Now<CR>

5: Power On/Off control:

Type: Power<Space>1<CR>-----Power On

Power<Space>0<CR>-----Power Off

Power<Space>t<CR>-----Power toggle control

6: Mute On/Off control:

Type: Mute<Space>1<CR>-----Mute On

Mute<Space>0<CR>-----Mute Off

Mute<Space>t<CR>-----Mute toggle control

7: Volume control:

Type: Volume<Space>xx<CR>-----Volume xx (xx range 0-79)

ex: Volume<Space>25<CR>----- Setting volume as 25 level

8: Zone out control:

Type: Zone<Space>a<Space>b<CR>-----a :zone number (0:all) ; b: 1/On 0/Off t/Toggle

ex: Zone<Space>3<Space>0<CR>-----Zone 3 off

ex: Zone<Space>0<Space>0<CR>-----Zone all off

ex: Zone<Space>0<Space>1<CR>-----Zone all on

9: Save memory now:

Type Save<CR>-----store all current setting without power on/off status

10: Select Aux Out:

Type: Aux<CR>

11: Select Module Out

Type: Module<CR>

12: System lock setting:

Type: Lock<Space>0<CR>-----System lock off

Lock<Space>1<CR>-----System lock on

Lock<Space>t<CR>-----System lock toggle

13: Version number:

Type: Version

14: Remote control Module:

Type: M<Space>xxx<CR>-----Remote control function

1: radio

2: prog

3: ran

4: rep

5: folder

6: stop

7: play/pause

8: prev

9: next

10: enter

11: up

12: down

13: +

14: -

15: band

16: cd

17: sd

18: am

19: fm

20: usb

21: play

22: pause

ex: Play CD

M<Space>CD<CR>

M<Space>Play<CR>

15: Program Select:

Type: Prog<Space>xxx<CR>----- Program select function

ex: Prog<Space>123<CR>

Prog<Space>003<CR>

note : the number must 3 digits